


BAL Assessments

www.BAL.net.au

John Burke

0417 885 747 John@BAL.net.au

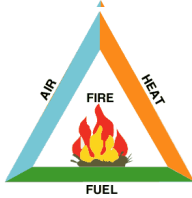

Typical Schematic Section for a Remote Outlet

If you plan to use a remote outlet from the tank ie a standpipe with a CFA fitting, it must be gravity feed from the bottom of the tank to the point of outlet. We will also need a section drawing showing the fall and distance from the tank to the point of outlet, in a format suitable to use across an A4 page. Note the outlet has to be a minimum of 300mm and a maximum of 600mm above ground. The drawing preferably should be a schematic ie it does not have to be to scale.

Refer: "[Guidelines for remote outlets on water tanks in the Bushfire Management Overlay](#)"

